



## Inner Frame Fitting (most common for all products)

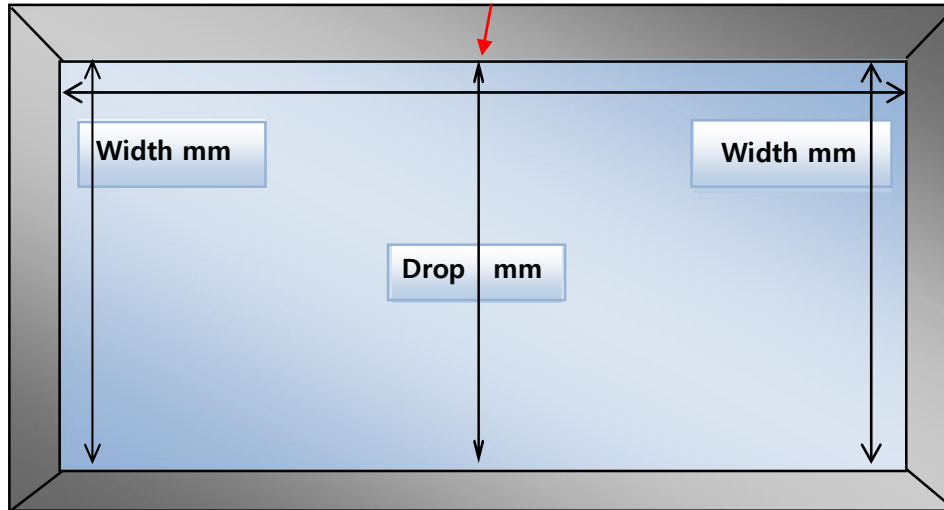

## Above Frame or Face Fitting

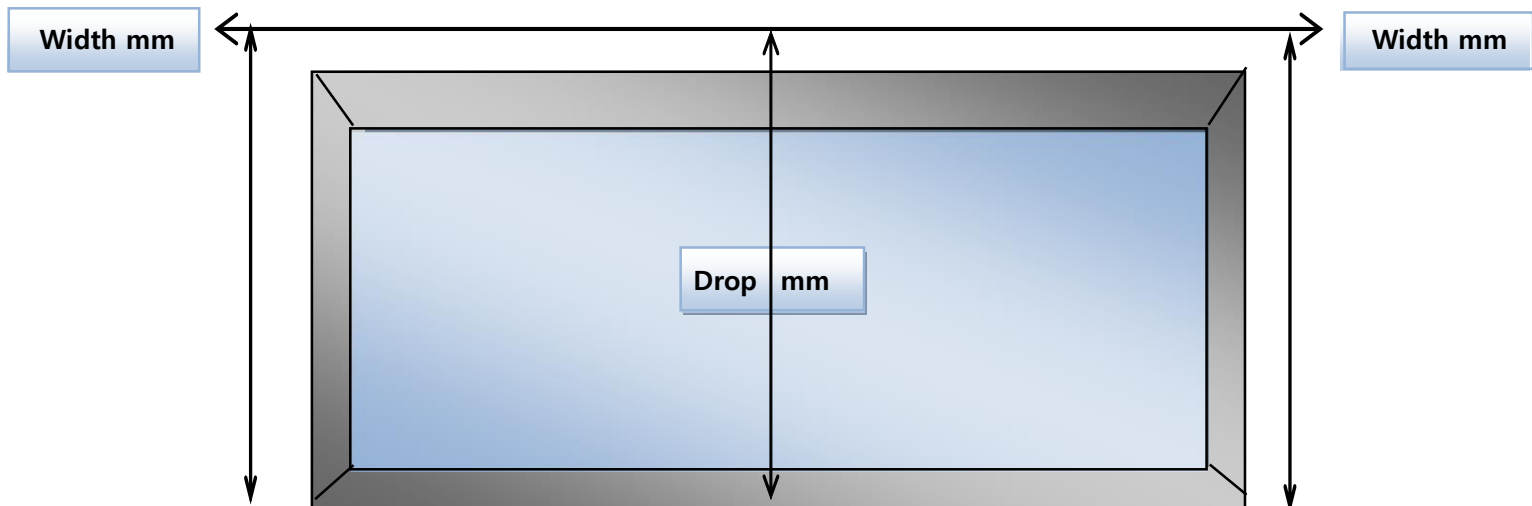

### Important Guidelines

- Use a firm metal tape measure and apply maximum tension for accuracy. Measure in mm only
- Do NOT make any self-adjustments to the measure process as illustrated above.
- Minimum depth for standard orthodox inside fitting (red arrow) should be 50mm. Exceptions can apply. Contact us for further advice.
- For Face-Fitting measures, typically needed due to insufficient window frame depth, add 50mm minimum, to total exterior frame drop and 100mm minimum, to total exterior frame width. Applies to Roller and Roman Blinds only. For other blind products, please contact Kiwiblinds.
- Be wary of protrusive handles, catches and window mullions that may affect the moving function or installation process of the blind.
- We encourage you to contact us for general assistance with measuring and pre fitting appraisals, on a case by case basis.

*This document is a basic guide only. Other measuring and fitting factors may need to be considered. Kiwiblinds cannot take responsibility and recompense for inaccurate measurements and fitting incompatibilities. We encourage your contact for assistance as each situation applies.*